



Embedded Systems

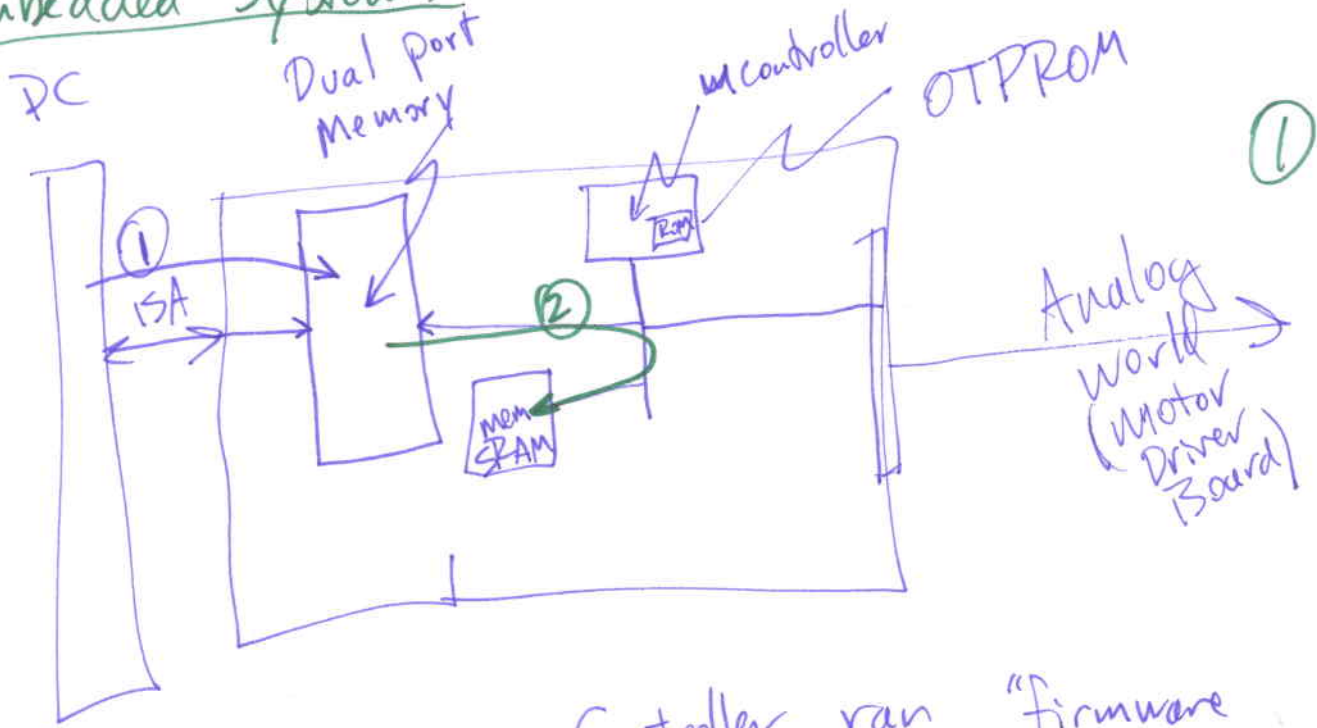

- ① Boot up, the μ Controller ran "firmware" to fetch instructions from the DP mem & put in RAM
- ② Move "program" from DP RAM to SRAM
- 3) Run program in SRAM
Take data in queues from the DP RAM, drive motors

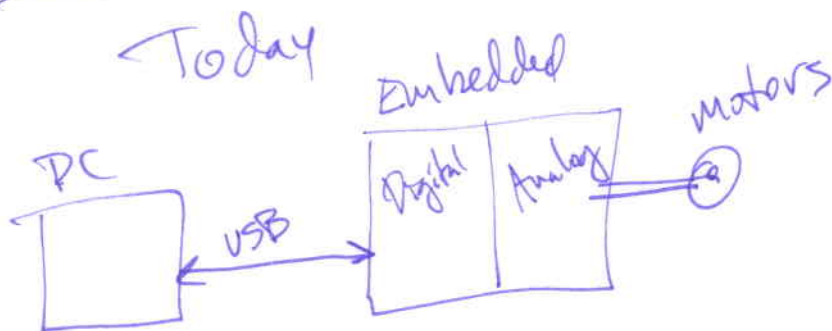

P169 near bottom
00FF should be FFFF